














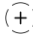 


iTable406


















User Manual




Operation

- » Plug the unit into a household power supply. (AC 100~240V)
- » Touch  for a while to turn on the device. All buttons light on and the BT begins to search signal.
- » Turn on the BT function of your device, search BT the signal "eMoMo iTable406". Pair your BT device with the "eMoMo iTable406". If it is paired successfully, a "Du" sound will be made and you can Play music with your BT device. If you want to disconnect the BT, touch  for 3s to disconnect it.
- » Touch  to play or pause the music file.
- » Touch  time after time to decrease volume gradually. Touch and hold it to decrease volume rapidly.
- » Touch  time after time to increase volume gradually. Touch and hold it to increase volume rapidly.
- » Touch  to back to the last track.
- » Touch  to switch into the next track.
- » Connect your AUX device to the product via  outlet by an AUX cable, the audio will switch into AUX audio mode automatically and you can play music via your AUX device.
- » Insert a USB has MP3 audio file in into the USB outlet next to AUX-IN outlet, the audio will switch into USB MP3 player and automatically. Available for mp3/.mp2/.wma/.asf/.wmv/.wav/.aif/.aiff/.aifc/.m4a/.aac/.mp4/.mov/.flac.
- » Touch  shortly could cut off the AUX and USB connection. Then you can pair the BT and play music via BT device.
- » Connect your earphones with  outlet to listen music via earphones.
- » Touch  to recline the chair.
- » Touch  to close the chair.
- » Touch  to return the chair to Upright Position.
- » Touch  to lift the headrest.
- » Touch  to retract the headrest.
- » Put your device on the wireless charging area to charge for it. Ensure that the receiver of your device is aligned with  logo.
- » If unexpected problem is took place on the product, like water flow in, the safety switch will cut off the power then pop up. Press it down after troubleshooting, then it could work normally. But if it remains in trouble, the safety switch cannot be press down.
- » Swivel clockwise to open the silicon cover of the sockets.

Buttons and Functions

Icon	Function
	Power on/off
	Press for 3s to disconnect the BT pairing. Press shortly to switch into BT mode
	Play/pause the music track.
	Decrease the volume.
	Increase the volume.
	The last track.
	The next track.
 AUX	AUX-IN
	Listen to music via earphones.
 OPEN	Recline the chair.
 CLOSE	Close the chair.
 HOME	Return the chair to Upright Position.
 HD UP	Lift the headrest.
 HD DOWN	Retract the headrest.
	AC 100~240V power supply.
 USB	USB MP3 player or 5V 2.1A max charging outlet.
	Wireless charging area.



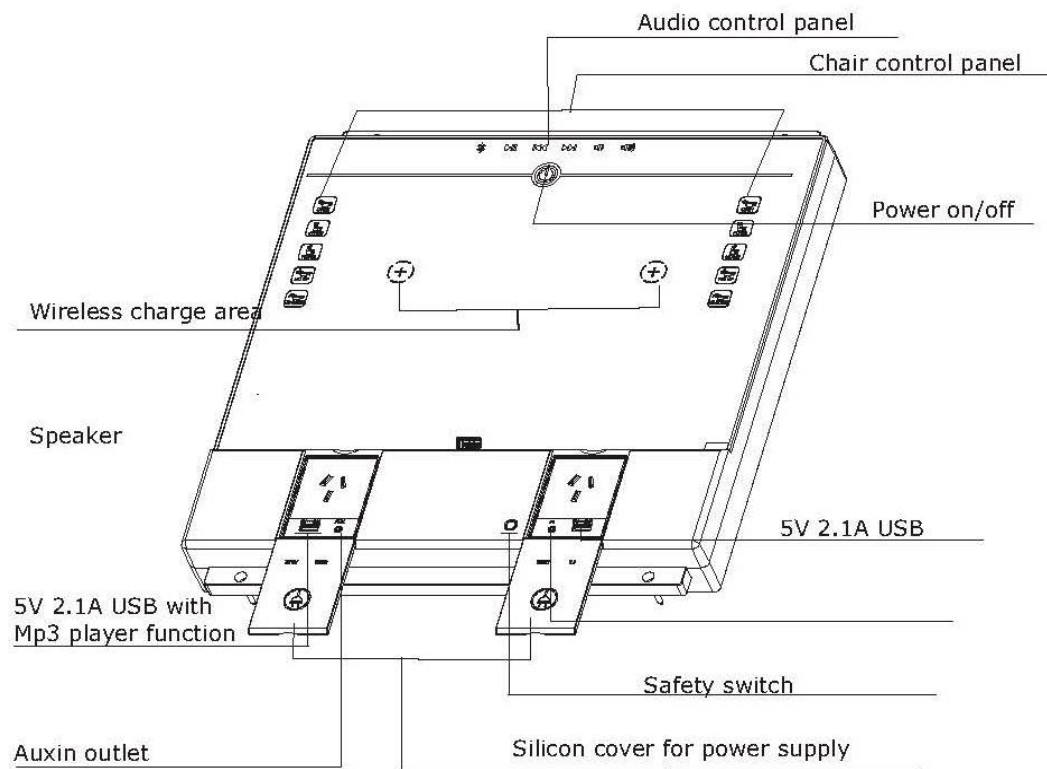


Panel Description



Caution

- » Congratulations on your new smart table top. Please read the user manual carefully before using the unit. Then operate it properly.
- » Appliance is not to be used by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- » Children being supervised not to play with the appliance.
- » If the supply cord is damaged, it must be replaced by the manufacturer its service agent or similarly qualified persons in order to avoid a harzard
- » Total load current plus controller's current should not exceed 10A.
- » Avoid to place drinks or liquids on or near the socket outlets.
- » The unit should be powered off before unplugging it.
- » Do not touch the socket at any time, it may cause an electricity shock.
- » Do not pull the silicon cover of the sockets too hard, it may cause a damage to the product.
- » Ensure the apparatus are installed properly.
- » The apparatus is for in door use only.
- » Avoid to use it in extreme environment.
- » This apparatus is supposed to be connected with AC 100V-240V power supply.
- » The unit should be powered off before unplugging it.
- » Avoid to touch the sock at any time, it may cause an electricity shock.
- » Avoid to pull the silicon cover of the sockets too hard, it may cause a damage to the product.
- » Ensure the apparatus are installed properly.
- » The apparatus is for in door use only.
- » Avoid to used it in extreme environment.
- » Avoid to place the apparatus in sunlight exposure or the heat source.
- » Avoid to take any components away from the apparatus because there is not useless component and it may cause an electricity shock.
- » Never try to repair this product by yourself as it may cause a void warranty. Please contact with the store or customer service for help if problem occurs.
- »This apparatus might be updated as technology & system upgraded. The content that updated accordingly won't be informed especially.

Frequently Asked Questions

Problem	Possible cause and correction
No power	<ol style="list-style-type: none"> 1. The plug is plugged into a useless socket. Change a useful socket. 2. The plug isn't plugged properly. Re-plug it. 3. The safety switch has pop up. Press it down, then try to turn it on again.
No sound at all	<ol style="list-style-type: none"> 1. The volume switch is on minimum. Increase the volume. 2. The music is paused. Re-play it. 3. It isn't in the corresponding play mode. Touch  to switch into the right mode.
The unit doesn't response	<ol style="list-style-type: none"> 1. The unit is in poor connected. Check all connectors and reconnect them if it's necessary. 2. There is interference source around. Remove it and try to turn it on 15 seconds later. 3. It is crashed because of improper operation. Reconnect the power supply, then try to turn it on 15 seconds later.
The Bluetooth can't be paired	<ol style="list-style-type: none"> 1. It has been connected to the other device. Press  for a while to disconnect the previous BT connection and try it again. 2. Do not pair the Bluetooth behind a wall or in a corner. Keep the working space in 8M. 3. It is not in the Bluetooth mode. Touch  to switch into the Bluetooth mode.
USB mode can't work	<ol style="list-style-type: none"> 1. Available for mp3/.mp2/.wma/.asf/.wmv / .wav/.aif/.aiff/.aifc/.m4a/.aac/.mp4/.mov / .flac format. Others can't be played. 2. The USB is broken. Try to change a useful one. 3. It is not in the USB player mode. Touch  to switch into the USB player mode. 4. Ensure is is inserted in the USB outlet with the USB player function.
AUX mode can't work	<ol style="list-style-type: none"> 1. The music source is useless. Try another one. 2. The auxin cable is useless. Change a useful one. 3. It is not in the AUXIN player mode. Touch  to switch into the AUXIN player mode. 4. Ensure your device has the auxin function.

Warranty

- » This limited warranty doesn't resist your statutory rights in any way.
- » The warranty period is 2 years from the date of purchase.
- » you can certify your purchase date either by the original Invoice/ Receipt, or by the registration code.
- » The warranty is limited to the repair of the faulty audio device.
- » The warranty does not cover any transport or other direct/indirect costs or any risks associated with removing/dismounting, transport ation, and installing the products. It does not apply:
 - » the unit is misused.
 - » damage due to inexpertly carried out installation, incorrect connection, or incorrect packing.
 - » damage attributed to utilization not specified in the operating instructions, to negligence or modification.
 - » damage due to faulty or unsuitable peripheral devices.
 - » damage caused by accidents, lighting, water, fire, heat, war, civil unrest, or other events beyond the control of the manufacturer and its distribution partners.
 - » If repairs or modifications have been performed by unauthorized persons
 - » If you want to make a claim under the warranty, please always to contact the store from whom you purchase this product. Remark
Use product correctly and keep it probably will prolong the service life.

Specification

Input	AC 100~240V 10A
USB output	5V 2.1A max for each
Wireless charging output	5V 1A max for each
Socket output	AC 100~240V 10A in total